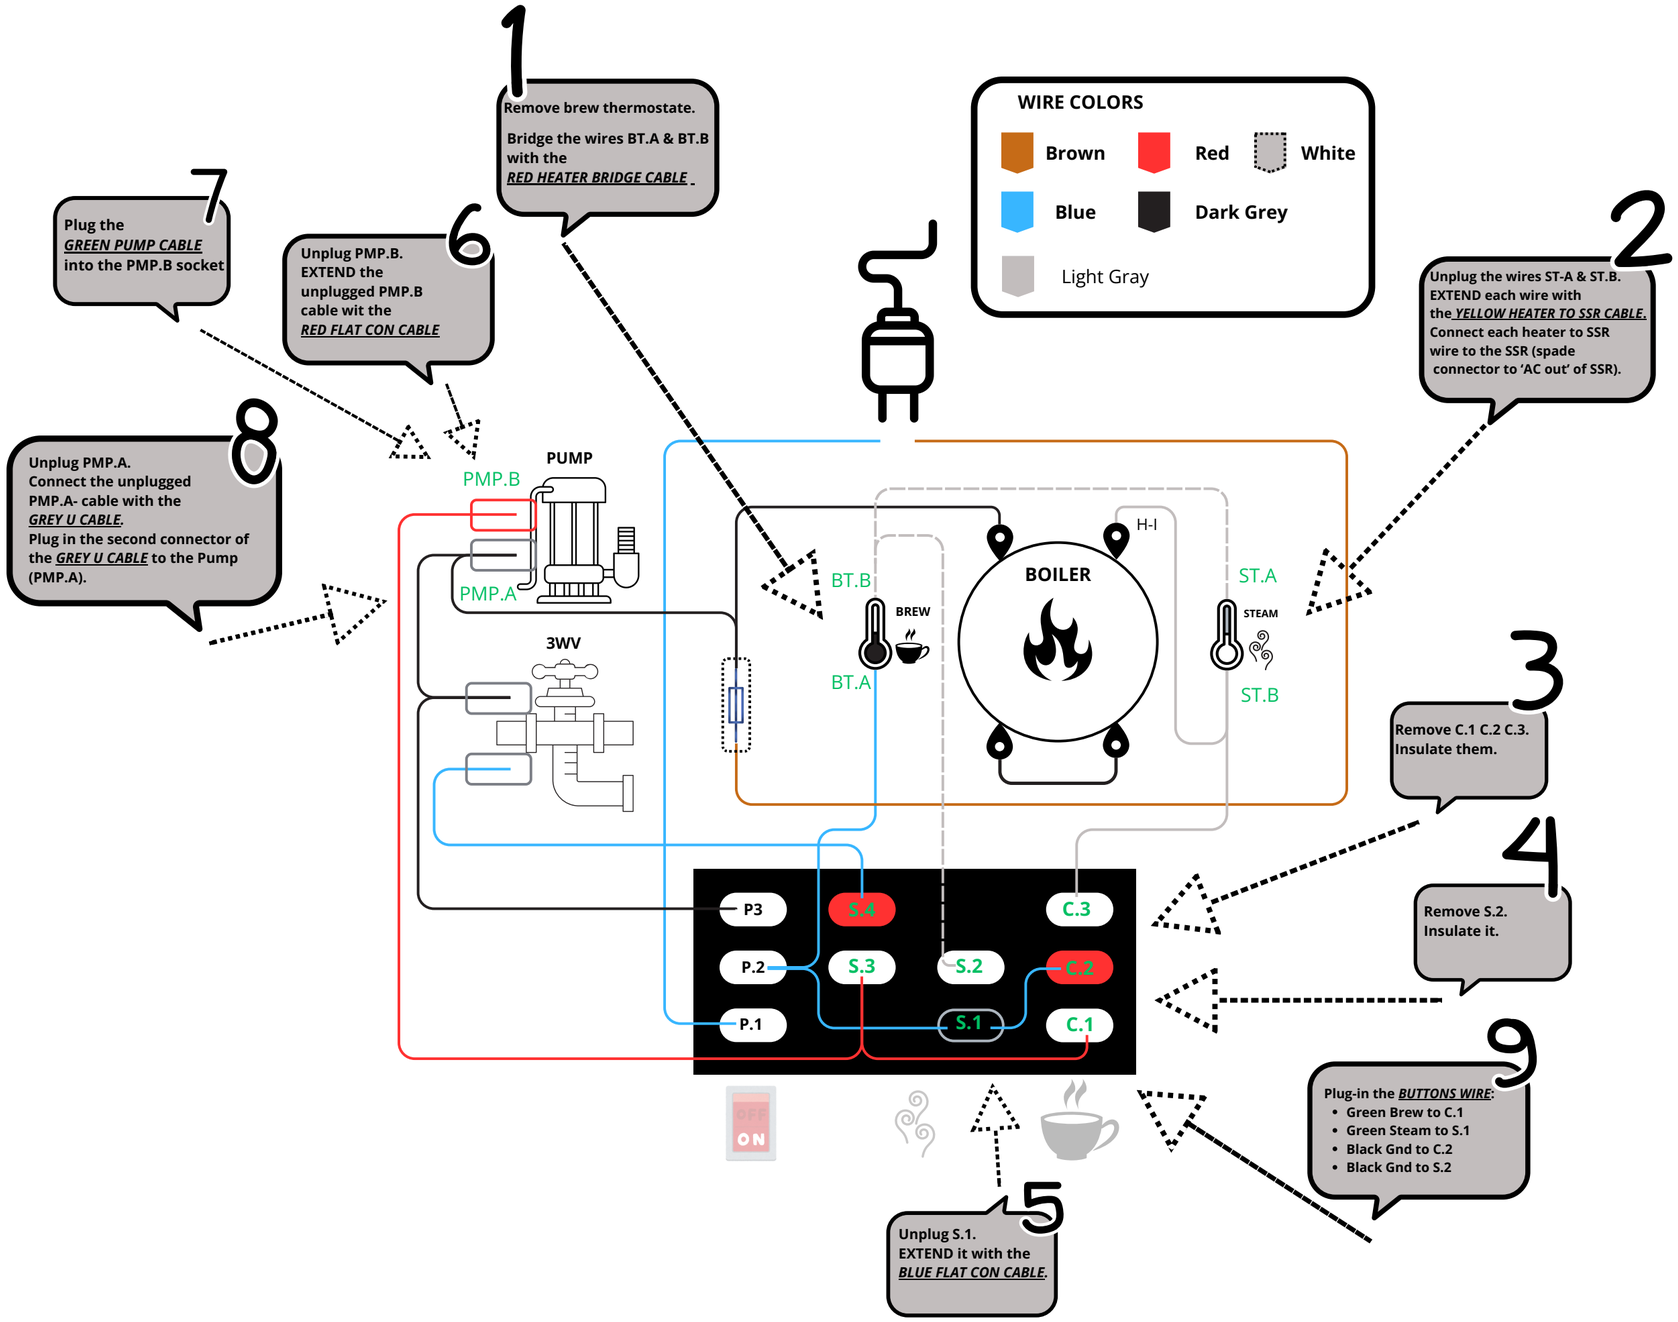
1
Remove brew thermostate.
Bridge the wires BT.A & BT.B with the RED HEATER BRIDGE CABLE .
WIRE COLORS
Brown
Red
White
Blue
Dark Grey
Light Gray
2
Unplug the wires ST-A & ST.B. EXTEND each wire with the YELLOW HEATER TO SSR CABLE. Connect each heater to SSR wire to the SSR (spade connector to 'AC out' of SSR).
3
Remove C.1 C.2 C.3. Insulate them.
4
Remove S.2. Insulate it.
5
Unplug S.1. EXTEND it with the BLUE FLAT CON CABLE.
6
Unplug PMP.B. EXTEND the unplugged PMP.B cable wit the RED FLAT CON CABLE
7
Plug the GREEN PUMP CABLE into the PMP.B socket
8
Unplug PMP.A. Connect the unplugged PMP.A- cable with the GREY U CABLE.
Plug in the second connector of the GREY U CABLE to the Pump (PMP.A).
9
Plug-in the BUTTONS WIRE:
Green Brew to C.1
Green Steam to S.1
Black Gnd to C.2
Black Gnd to S.2
PUMP
PMP.B
PMP.A
3WV
BT.B
BT.A
BREW
BOILER
H-I
ST.A
STEAM
ST.B
P3
P.2
P.1
S.4
S.3
S.2
S.1
C.3
C.2
C.1
OFF
ON